
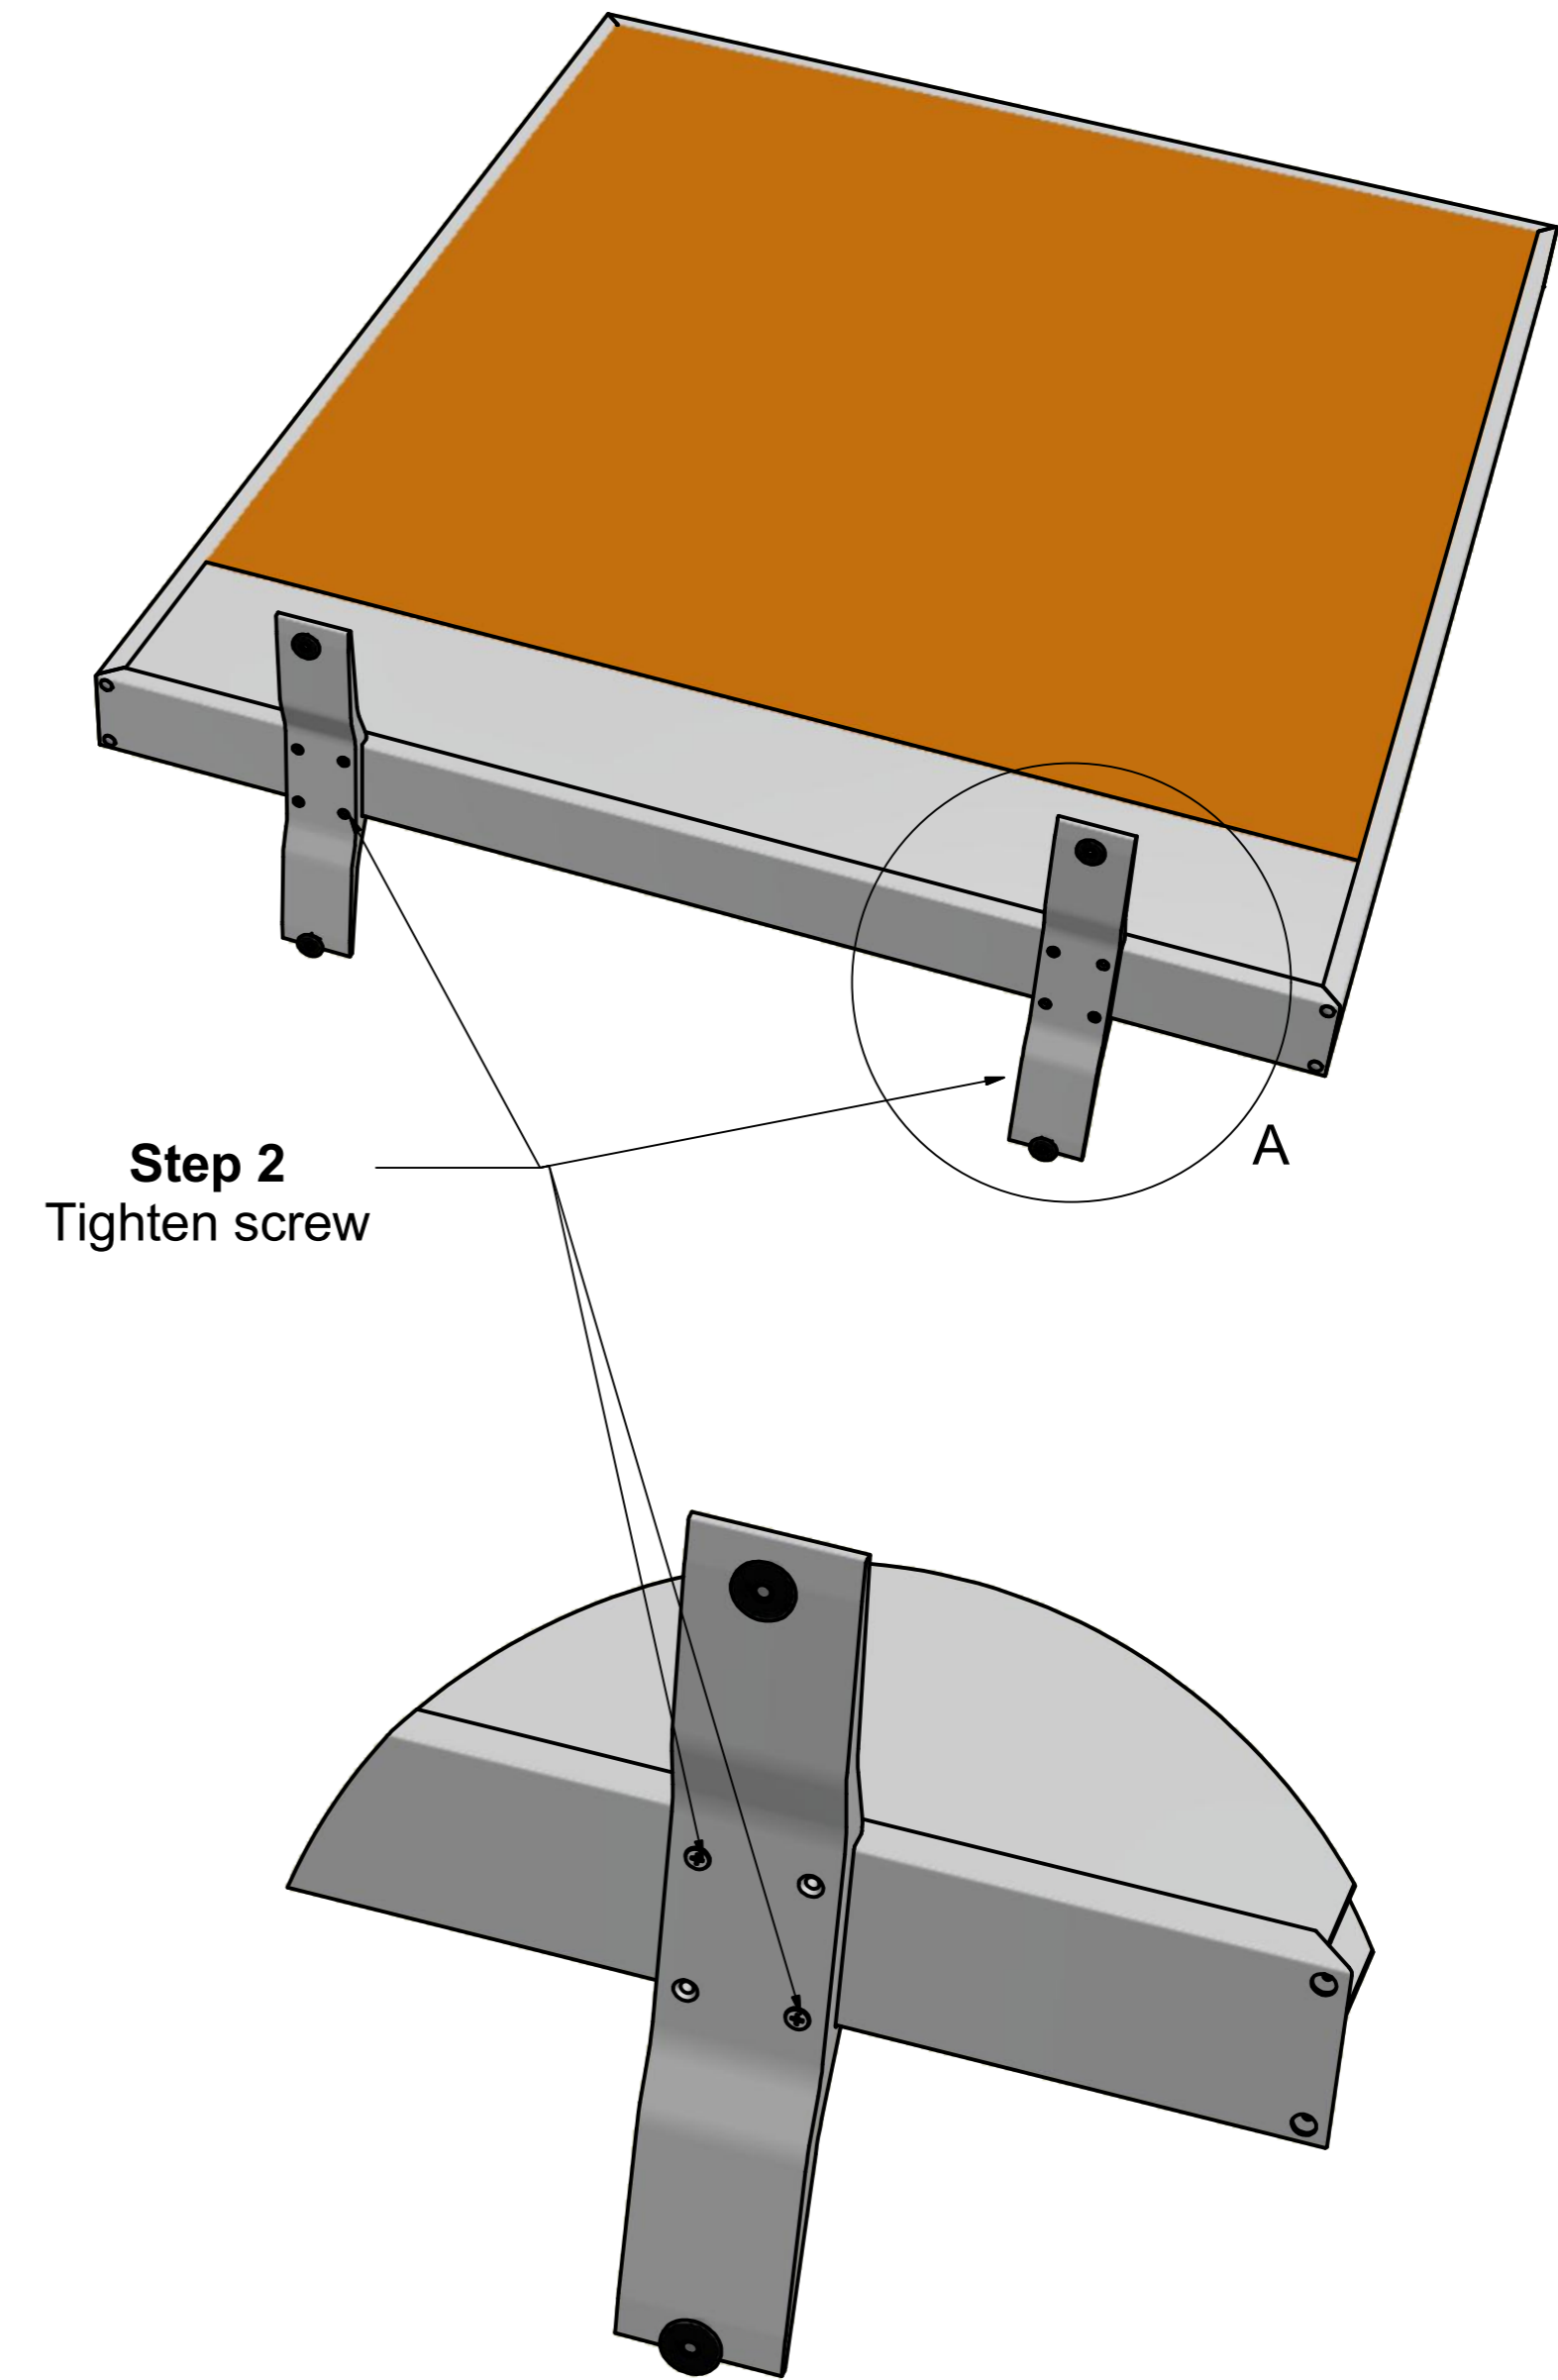


ABSTRACTA

Chubby Floor Screen

Monteringsanvisning/ Assembly Instructions ver 1.0


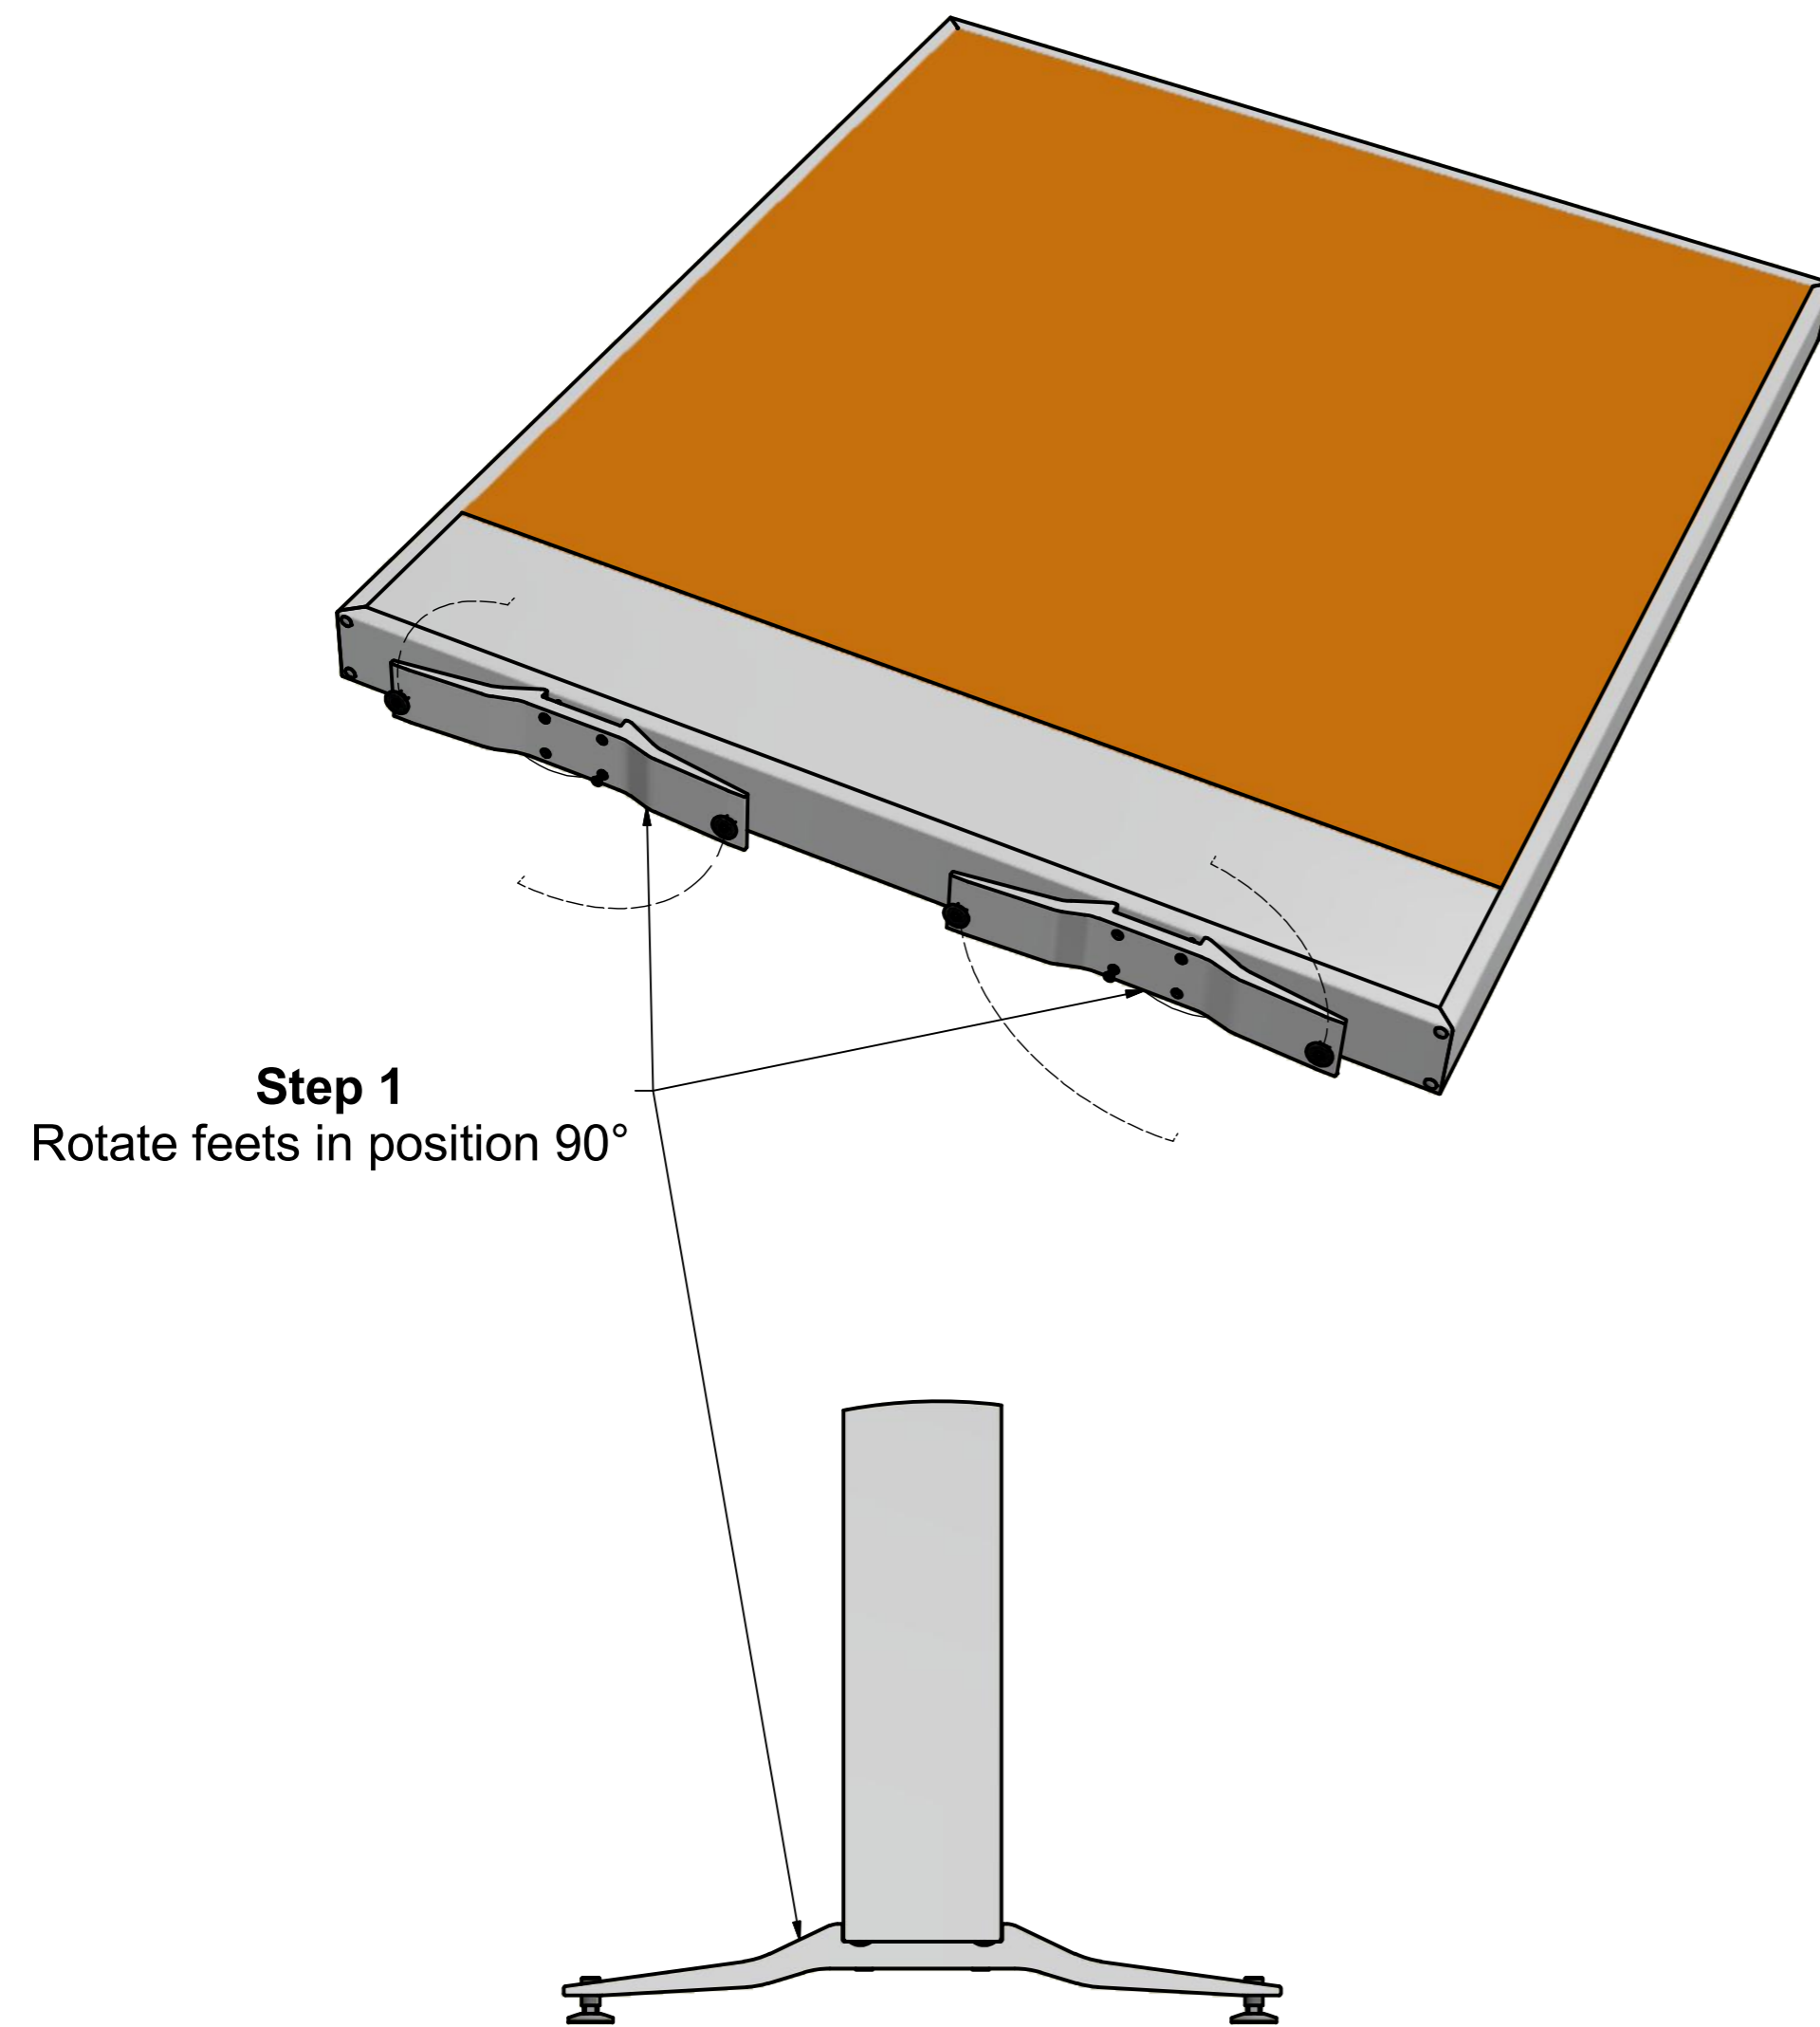


ABSTRACTA

Chubby Floor Screen with Glass

Monteringsanvisning/ Assembly Instructions ver 1.0

Step 1
Place Glass in Alu profile
and
tighten the screws (3x)

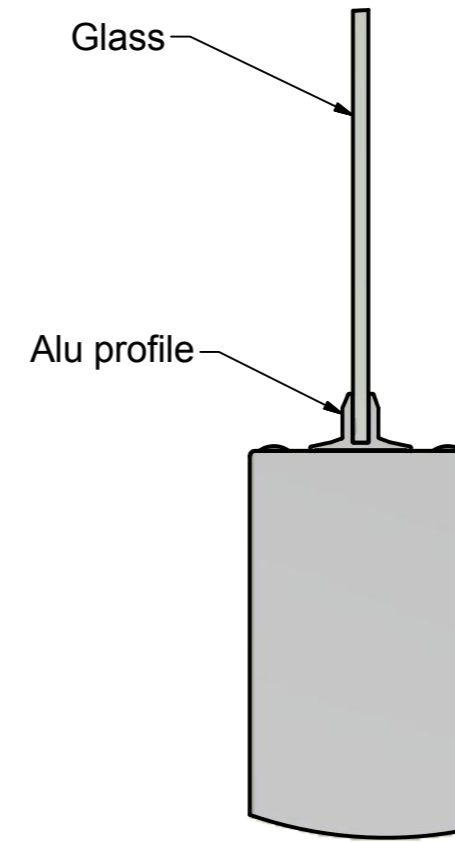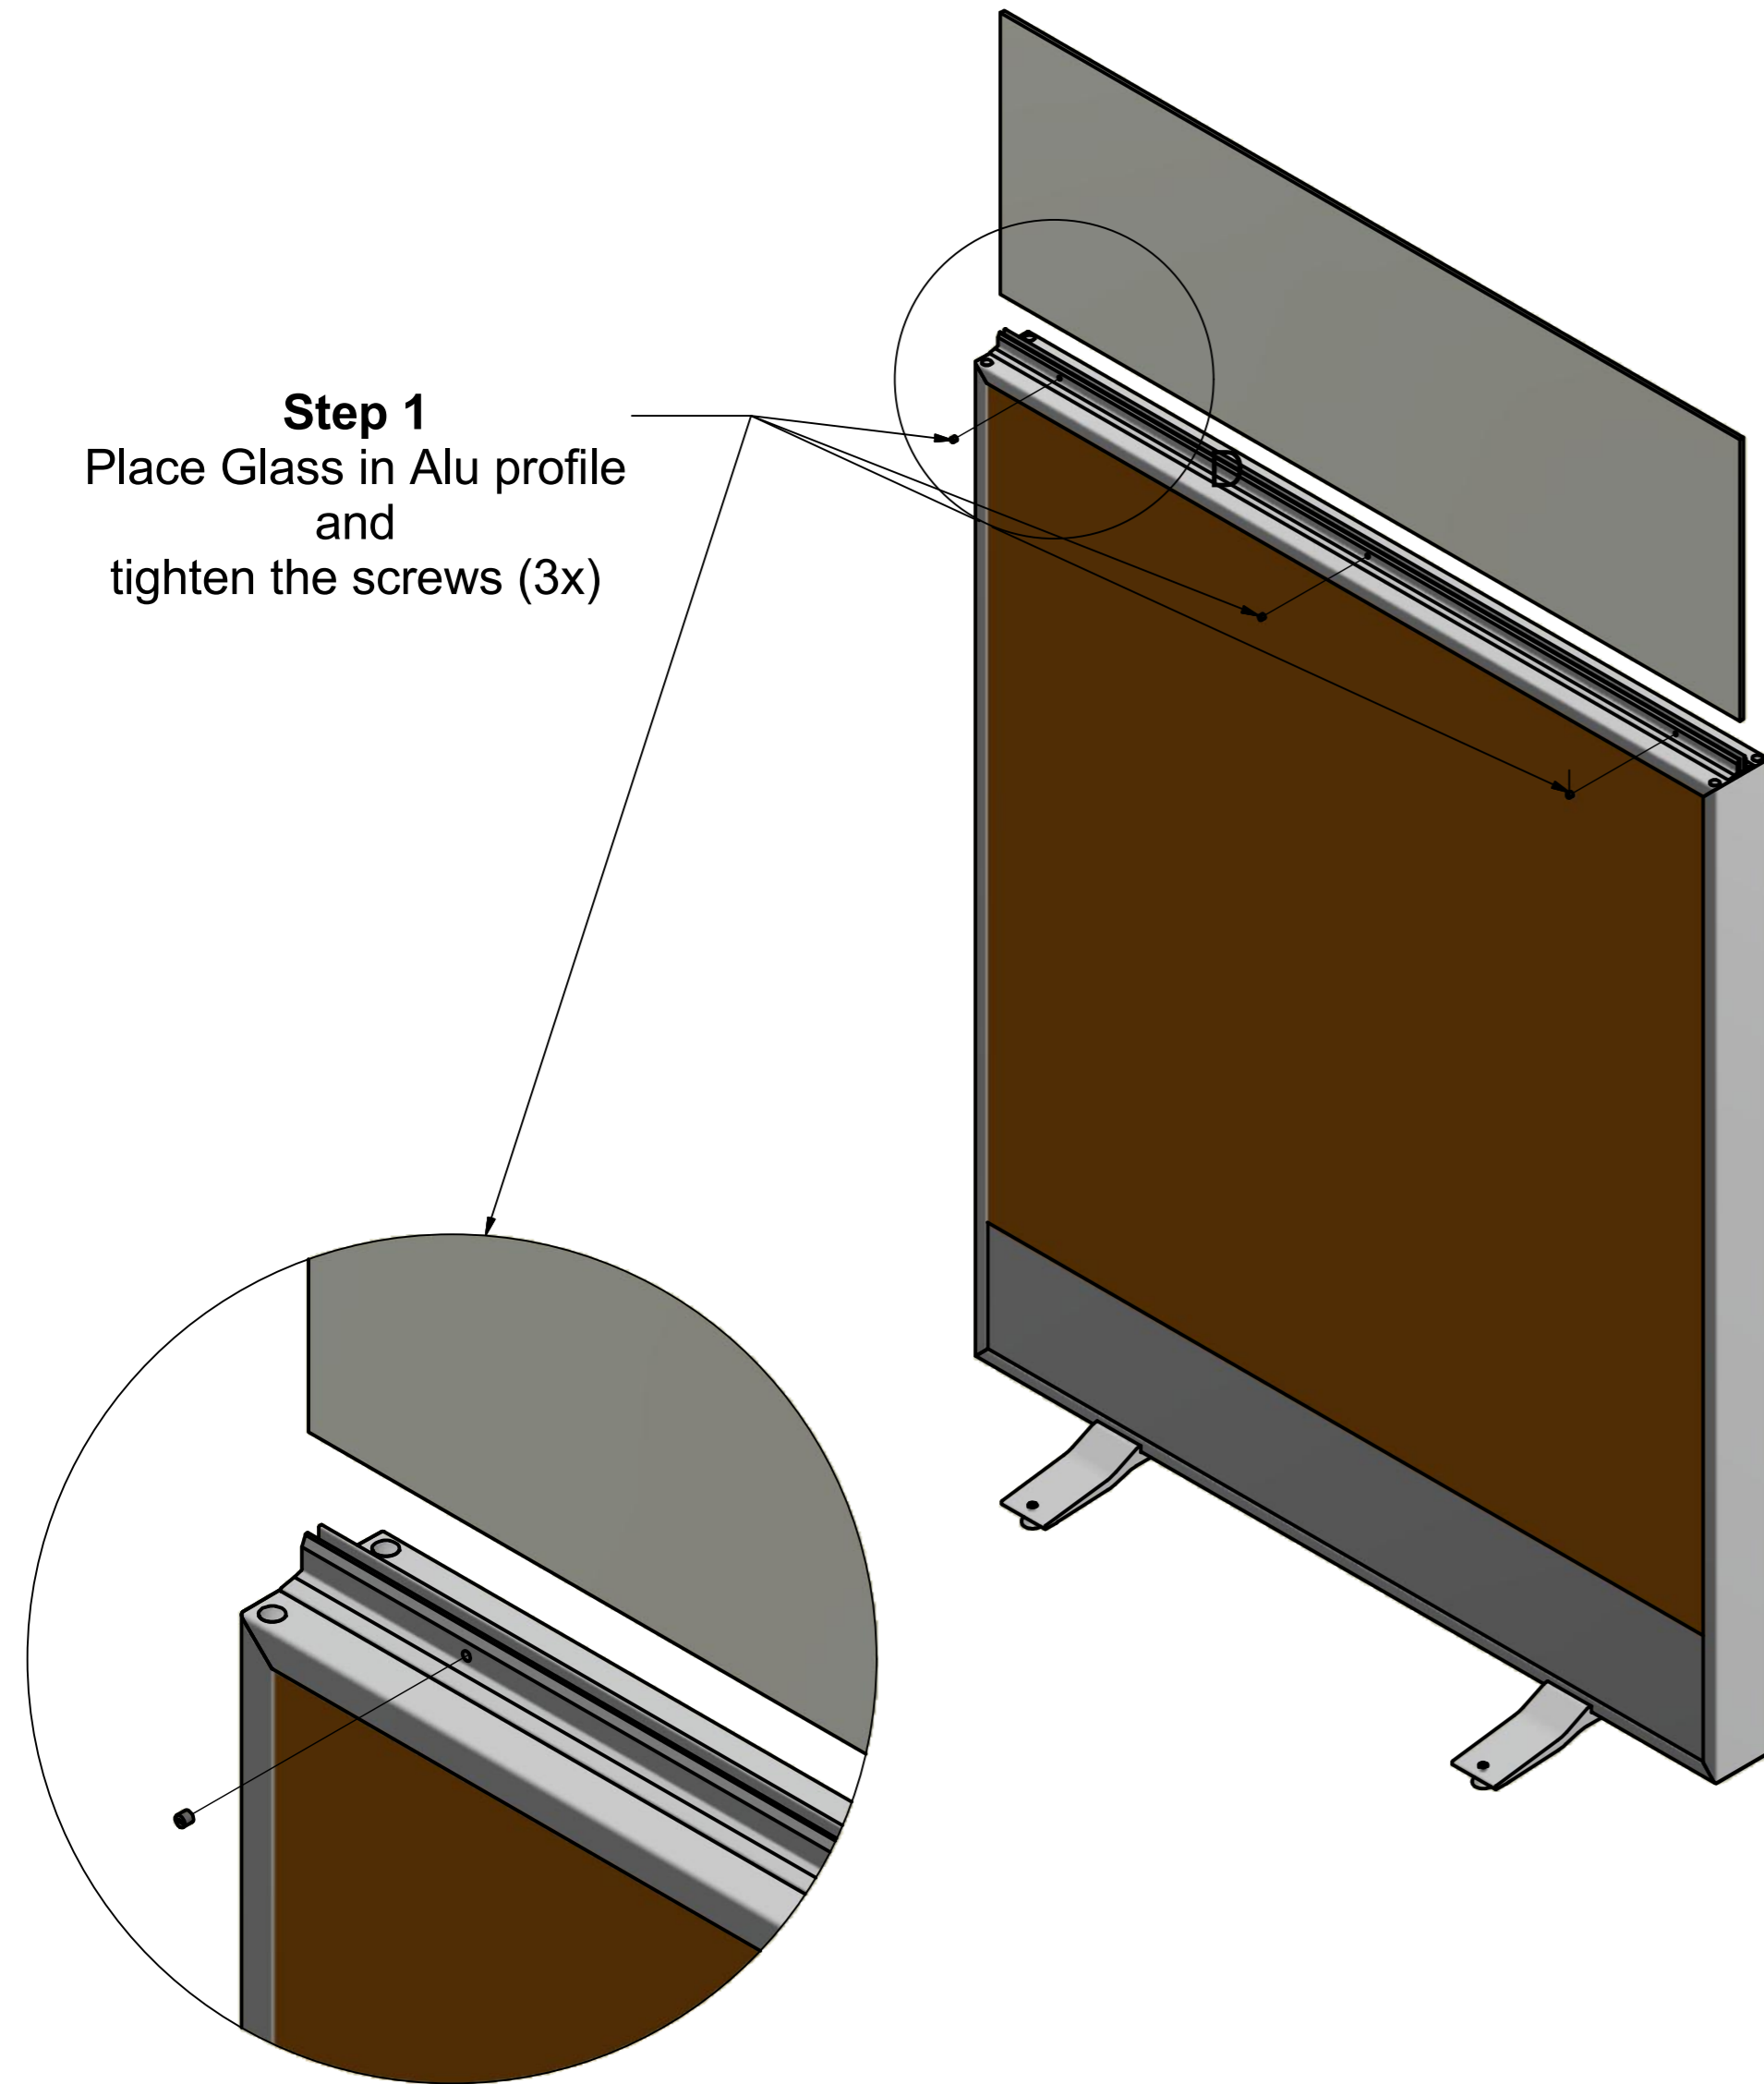

Step 2
Assembled product

